

# Ajax SpaceControl User m



Summarize



Updated July 6, 2023

[Chat With This Website](#)



**Ajax SpaceControl** is a miniature key fob with accidental click protection. It allows setting the Ajax system in the armed, night or disarmed mode and switching on an alarm.

As it is the two-way communication, you will know whether the system has received the Ajax SpaceControl command.

Operating as part of the Ajax system, the key fob is connected to the [hub](#) via the protected [Jeweller](#) protocol. In addition, the key fob can be used to control any third-party security central unit through the [uartBridge](#) or [ocBridge Plus](#) integration module.


We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).

Customize ▼

Reject All

Accept All

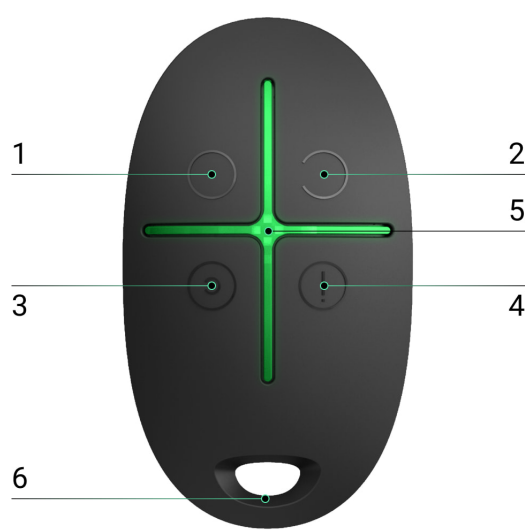

1. System arming button
2. System disarming button
3. Night mode button
4. Panic button (activates the alarm)
5. Light indicators
6. The hole for attaching the key fob



Buttons can be assigned when using a key fob with hub and Ajax uartBridge. At the moment, the feature of modification of commands (and deactivation) of the key fob buttons when using with the Ajax hub is not available.

## Using the key fob

### We value your privacy





We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).




Maximum connection distance between the key fob and the hub – 1,300 meters. This distance is reduced by walls, inserted floors and any objects hindering the signal transmission.

Ajax SpaceControl operates only with one security system via the integration module). If you connect the key fob to a it will cease to interact with the previous system. However, be automatically deleted from the list of devices of the hub.

### The key fob can:

- **Arm the system** – press the button  once
- **Turn on the night mode** – press the button  once
- **Disarm the system** – press the button  once
- **Switch on an alarm** – press the button  once


To turn off the actuated security system (siren), press the disarming mode button  on the keyf ob.



Accidental click protection is available on the Ajax SpaceControl with **firmware version 5.54.1.0 and higher**.

## Operational Indication

The key fob reports its status only after any button is pressed.

Type and color of indication of the key fob display depends on the firmware version of the device. You can find out the firmware version in the **Ajax application** → **Devices**  → **key fob**. Information about the firmware version is

We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).



2 green LED next to the pressed button lights up once	The key fob command has been sent over to the security system
<p><b>Firmware version 3.16 and lower</b></p> <p>The LED next to the pressed button quickly flashes green 4 times</p> <p><b>Firmware version 3.18 and higher</b></p> <p>The central LED lights up red briefly</p>	The command has not been received by the security system is to receive the command
2 LED next to the button lights up green twice. Then 4 key fob LED flashes green 6 times	The key fob has been removed from the security system devices
The central LED lights up green for a few seconds	Linking a key fob to the security system
<p><b>Firmware version 3.18 and higher</b></p> <p>The central LED lights up green for approximately half a second</p>	The system has executed the key fob command
<p><b>Firmware version 3.18 and higher</b></p> <p>The central LED lights up red for approximately half a second</p>	<p>The system has not executed the key fob command – integrity verification is enabled in the system and one of the devices is faulty</p> <p><b><u>What is system integrity check?</u></b></p>
<p><b>Firmware version 3.16 and lower</b></p> <p>After the main indication, the central LED lights up green once and gradually goes out</p> <p><b>Firmware version 3.18 and higher</b></p> <p>After the main indication, the central LED lights up red once and goes out gradually</p>	<p>The key fob battery needs replacement. In this case, the key fob commands are delivered to the security system.</p> <p><b><u>Battery replacement</u></b></p>
<b>Firmware version 3.16 and lower</b>	The battery charge level is unacceptably low

We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).



level is unacceptably low, do not communicate commands to the hub, and do not notify with LED indication

## Connecting the key fob to the Ajax System

### Connection to hub

#### Before starting connection:

1. Following the hub instruction recommendations, install the [Ajax application](#) on your smartphone. Create an account, add the hub to the application, and create at least one room.
2. Go to the Ajax application.
3. Switch on the hub and check the internet connection (via Ethernet cable and/or GSM network).
4. Ensure that the hub is disarmed and does not start updates by checking its status in the mobile application.



Only users with administrative privileges can add the device to the hub.

#### How to connect key fob to hub:

1. Select the **Add Device** option in the Ajax application.

#### We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).




interfacing to occur, the key fob should be located within the coverage area of the wireless network of the hub (at a single protected object).

The key fob connected to the hub will appear in the list of devices of the hub in the application.

## Connecting the key fob to Third-Party Security Systems

To connect the key fob to a third-party security central unit using the [Ajax uartBridge](#) or [Ajax ocBridge Plus](#) integration module, follow the recommendations in the manual of the respective device.

## States

1. Devices 
2. Ajax SpaceControl

Parameter	Value
Battery Charge	Battery level of the device. Two states available: <ul style="list-style-type: none"><li>• OK</li><li>• Battery discharged</li></ul> <p><a href="#">How battery charge is displayed in Ajax apps</a></p>
Accidental Press Protection	Indicates the method of protection against accidental clicks:



### We value your privacy


We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).



	The function is available on key fobs with <b>firmware version 5.54.1.0 and higher</b>
The status of the connection with the ReX range extender	Displayed if the key fob is working through a <b><u>radio signal range</u></b>
Panic	Panic button status
Permanent Deactivation	Displays the device's status: active or completely disabled by the user
Firmware	Firmware version of the key fob. It is not possible to change the firmware
Device ID	Device identifier

## Setting Up the key fob

1. Devices 
2. Ajax SpaceControl
3. Settings 

Setting	Value
Name	Device name, can be edited
Room	Selecting the virtual room to which the device is assigned
Group Management	Selection of a security group that the key fob manages. You can select <b>All groups</b> or a single group.   <i>Configuration is available only after group</i>

### We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).



	<ul style="list-style-type: none"> <li>• Security mode management rights are determined by key fob settings.</li> </ul> <p><b>Key fob is assigned to user:</b></p> <ul style="list-style-type: none"> <li>• Key fob events are assigned to the user's name.</li> <li>• The key fob has the same security mode management rights as the user.</li> </ul>
Panic	Turning on/off the panic button
Accidental Press Protection	<p>Choosing the method of protection against accidental clicks:</p> <ul style="list-style-type: none"> <li>• <b>Off</b> – protection is turned off</li> <li>• <b>Long press</b> – in order for the key fob to transmit the command to the hub, you need to press and hold the button for more than 1.5 seconds</li> <li>• <b>Double press</b> – in order for the key fob to transmit the command to the hub, you need to double-press the button with a pause of no more than 0.5 seconds between the presses</li> </ul> <p>The function is available on key fobs with <b>firmware version 5.54.1.0 and higher</b></p>
Alert with a siren if panic button is pressed	If the toggle is enabled, pressing a panic button activates <a href="#">Ajax sirens</a> connected to the system. Ajax SpaceControl activates all sirens, regardless of the groups they are in.
User Guide	Opens the device User manual
	Allows a user to deactivate the device without deleting it from the system. Once deactivated,

## We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).





Unpair Device

Disconnects the device from the hub and deletes its settings

## Key fob maintenance and battery replacement

When cleaning the key fob body, use any means suitable for equipment maintenance.

Do not use for cleaning Ajax SpaceControl any substances containing alcohol, acetone, gasoline, and other active solvents.

The pre-installed battery provides up to 5 years of operation of the key fob during normal use (one arming and disarming of the security system per day). More frequent use can reduce battery life. You can check battery level at any time in the Ajax app.



Keep new and used batteries away from children. Do not ingest battery, Chemical Burn Hazard.

The pre-installed battery is sensitive to low temperatures and if the key fob is significantly cooled, the battery level indicator in the app may show incorrect values until the key fob gets warm.



The value of the battery level is not updated regularly, but only after pressing one of the buttons at the key fob.

When the battery is discharged, the user will receive a notification in the Ajax

### We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#)



# Tech Specs

Number of buttons	4
Panic button	Yes
Accidental click protection	Available with the firm... higher. Manufacture date from March 19, 2020  <b><u><a href="#">How to find out the manufacture date of a detector or device</a></u></b>
Radio communication protocol	Jeweller  <b><u><a href="#">Learn more</a></u></b>
Radio frequency band	866.0 – 866.5 MHz 868.0 – 868.6 MHz 868.7 – 869.2 MHz 905.0 – 926.5 MHz 915.85 – 926.5 MHz 921.0 – 922.0 MHz Depends on the region of sale.
Compatibility	Operates with all Ajax <b><u><a href="#">hubs, radio signal range extenders, ocBridge Plus, uartBridge</a></u></b>
Effective radiated power	6.01 dBm / 3.99 mW (limit 20 mW)
Modulation of the radiosignal	GFSK
Radio signal range	Up to 1,300 m (any obstacles absent)
Power supply	1 battery CR2032A, 3 V
Service life from the battery	Up to 5 years (depending on the usage frequency)

## We value your privacy

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).



Certification

Security Grade 2, Environmental Class III in conformity with the requirements of EN 50131-1, EN 50131-3, EN 50131-5-3

## Compliance with standards

### Complete Set

1. Ajax SpaceControl
2. Battery CR2032 (pre-installed)
3. Quick start guide

### Warranty

Warranty for the Limited Liability Company "Ajax Systems Manufacturing" products is valid for 2 years after the purchase and does not apply to the pre-installed battery.

If the device does not work correctly, you should first contact the support service – in half of the cases, technical issues can be solved remotely!

[The full text of the warranty](#)

[User Agreement](#)

Technical support: [support@ajax.systems](mailto:support@ajax.systems)

**We value your privacy**

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).



Subscribe to the newsletter about safe life. No spam

Email

Subscribe

**We value your privacy**

We use cookies to enhance your browsing experience, serve personalized ads or content, and analyze our traffic. By clicking "Accept All", you consent to our use of cookies. [Cookie Policy](#).

